


CTM 24198 VOLVO FH4 INTERIOR

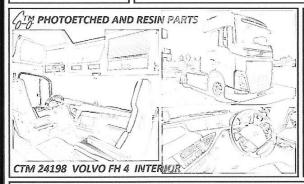

_ DETACH WITH KNIFE

- MAKE A HOLE

4

- BEND

GRIND

R

- REPLACE

?

OPTIONAL

2x

- NUMBER OF WORKING STEPS

This set is not a children's toy and was designed for professional modellers only who already have some skills in working with photoetched parts. Special tools for bending of photoetched parts is recommended when working with this set. Non using this tool during bending may cause destruction of the part. Careful bending of the most of the parts could be also done using a metal ruler, a sharp knife and a tweezer on a hard surface. Pay attention, be careful and keep your safety and health in mind during work!

For gluing and filling a cyanoacrylate glue and a glue removing liquid is recommended. When (or even before) working with each part inspection of the real part on the vehicle or a picture of the real thing is recommended and helpful.

Modification of plastic parts may be required for proper use of some of the photoetched parts

CTM 24198 VOLVO FH4 INTERIOR

1,2/LHD/RHD dash panel

3,4/ RHD/LHD side lower dash panel

5/ Passanger dash panel

6/ Main instrument panel

7,8/ Steering wheel buttons

9/ Integral lights control button (for part 20)

10/ Windon control panels

11/ Seat belt missing in the part

12,13/ A/C control buttons for panels 3,4

14,15/ Lights control panel LHD/RHD

16,17/ Tachograph and CD changes (overhead panel)

18/ Door speaker mesh

19/ GPS panel

20/ Internal lights control (overhead panel)

21,22/ Seatbelt buckle

