

D·A·B MODELS

DAB24-041 SURTIDOR COMBUSTIBLE BENNET FUEL PUMP 1960 (MOBILGAS)


Vas a montar un kit impreso en 3D en su totalidad, podrás apreciar un ligero rallado en las piezas, son las capas de impresión. Si crees conveniente puedes lijar las piezas para eliminarlas, teniendo cuidado de no dañar el detalle.

Asegúrate de limpiar y lijar bien las zonas donde se encontraban los soportes de sujeción de la pieza o de alguna línea de tensión.

You are going to assemble a fully 3D printed kit, you will be able to appreciate a slight scratch on the pieces, these are the printing layers.

If you think it is convenient you can sand the pieces to remove them, being careful not to damage the detail.

Make sure to clean and sand well the areas where the part's fastening supports or any tension lines were located.

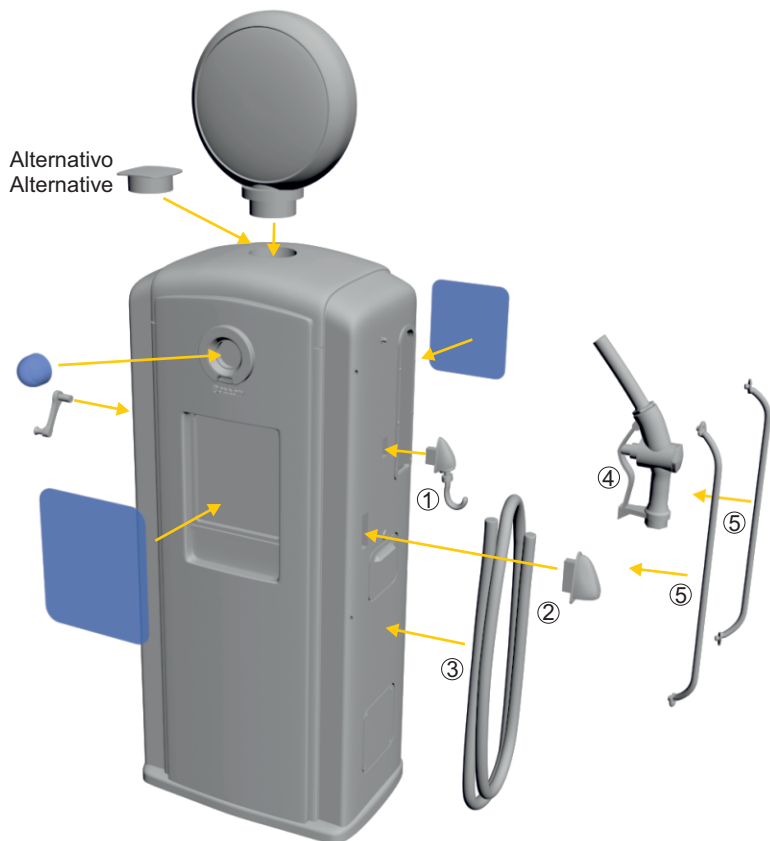

Al ser la manguera rígida, la mejor manera de colocar las piezas que la componen, es en el orden indicado. No obstante, Es solo una recomendación y se pueden montar como lo encuentres más sencillo.

As the hose is rigid, the best way to build it is in the indicated order. However, it is just a recommendation and you can try in the order you feel more comfortable.

