



FRONT

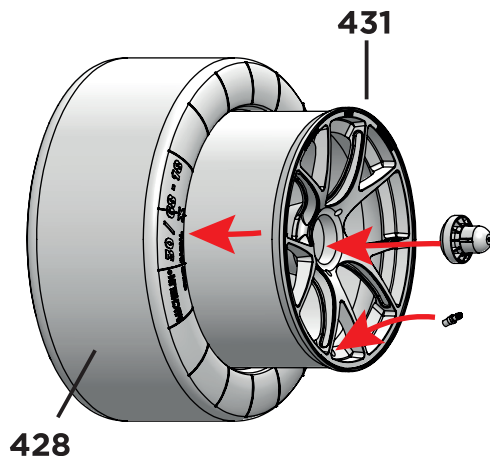

REAR

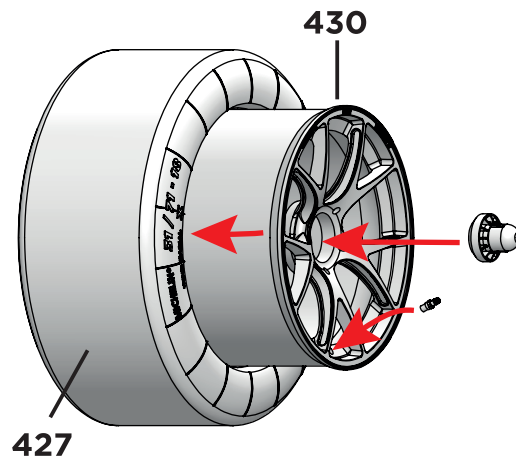

 Replace kit parts **B8, B9, B10** and **B11** with those supplied.



3D resin is fragile, so you should **NOT** use excessive force when removing the supports or joining the pieces or you risk breaking the parts.

Carry out a test assembly before painting the parts, sanding where necessary and preferably the plastic parts of the kit, until the parts fit together with light pressure without being forced.

decalcas