

1/20 SCALE PRECISION MULTI-MEDIA KIT




SCM SOUTHERN
CROSS *
MINIATURES

MC-001

GERMAN W125 GRAND PRIX CAR

German GP 25th July 1937

Rudolf Caracciola # 12 - 1st position

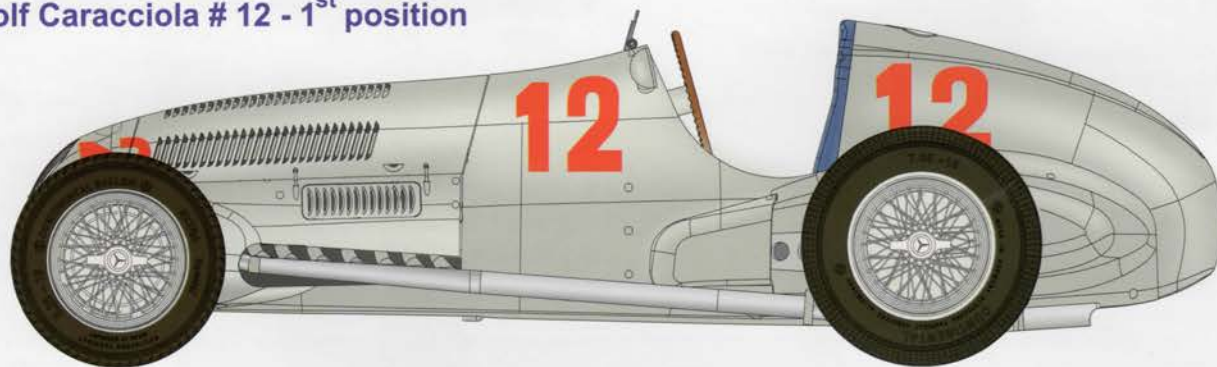

Manfred von Brauchitsch # 14 - 2nd position



<http://www.southernxmin.com>

Christian Kautz # 20 - 6th position



Richard Seaman # 18 - DNF accident



CORRECT METHOD FOR APPLYING DECALS:

1. Clean model surface with wet cloth.
2. Cut out of decal sheet and dip them in cold water for 15 seconds.
3. Place decal on proper position on model.
4. Slide off base paper leaving decals on model with wet finger tip.
5. Adjust decals to exact position, push out excess water under decal with soft cotton cloth.


READ BEFORE ASSEMBLING:

- ★ When you use glue or paint, do not use near open flame, and use in well ventilated room.
- ★ Keep plastic model glue and tools out of the reach of children.
- ★ Glue, paints and tools are not included in the kit.
- ★ Remove all resin pins carefully using a modeling file.




ICON INSTRUCTION:

	Bend		Optional		Apply Decal		Weight		Drill Hole		2 Sets needed
	Remove		Attention		Do not cement		File/Sand		Fill Hole		Instant Glue For Metal





COLOUR	Mr.HOBBY	AQUEOUS	COLOUR	Mr.HOBBY	AQUEOUS
SILVER	C 8	H 8	WOOD BROWN	C 43	H 37
ALUMINIUM	MC 218	N/A	BLUE GREY	N/A	H 42
STEEL	C 28	H 18	FLAT BASE	N/A	H 40
SEMI-GLOSS BLACK	C 92	N/A	GREY	C 308	H 308
BRASS	MC 219	N/A	EXTRA DARK GREY	C 333	H 333
RED BROWN	C 131	H 47			

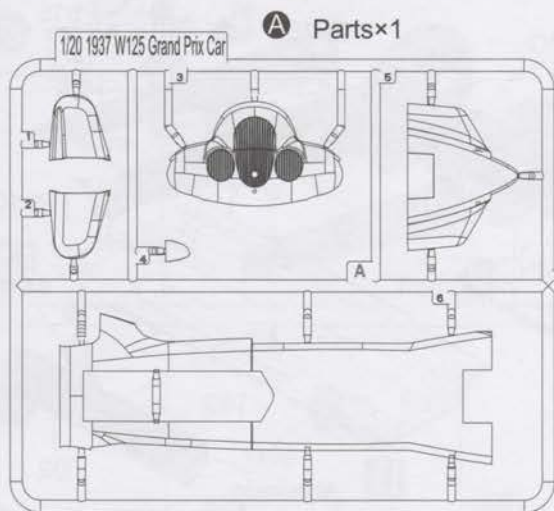

Body Part

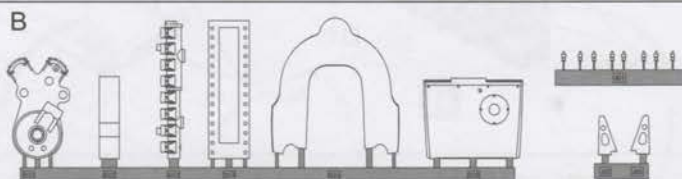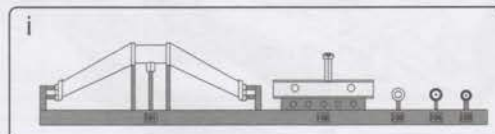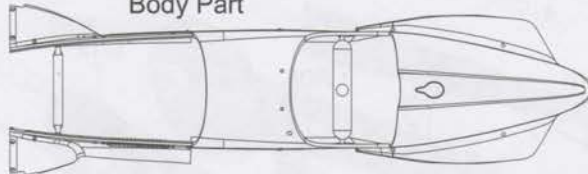

Resin Parts

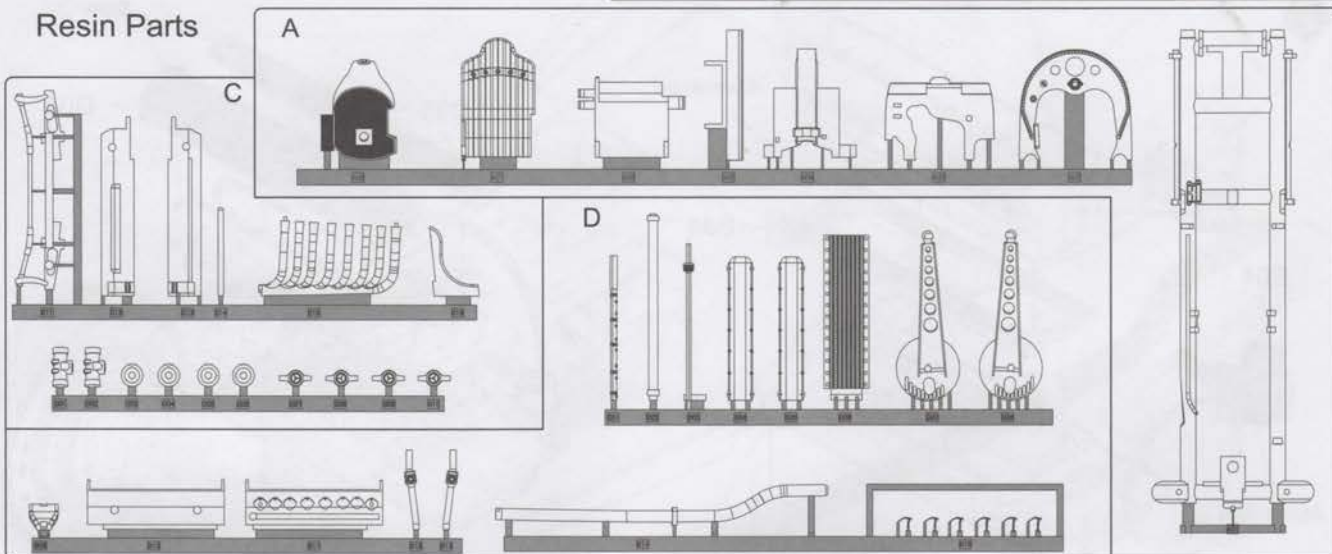

Decal



Windscreen



Rear Tire x2



Front Tire x2



Spring×2





Flexible wire :Ø0.5mm (50cm)

Pa

Pc

Pb

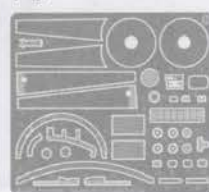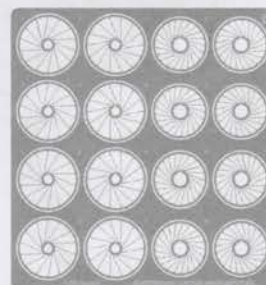

Outer rim x4



Inner rim x4



Front Center rim x2



Rear Center rim x2




Remove




Attention

Kit is only for expert modellers. Assemble using a cyanoacrylate glue or quick setting epoxy glue. When sanding resins or any material which produces a fine dust always wear a dust mask and work in a well ventilated area. If distorted immerse part in hot water, correct, and then immerse in cold water. Gentle heat from e.g. hairdryer will also work. "Do not use naked flame!!!". Polyurethane resin kits needs to be washed in warm soapy water like any normal plastic kit before painting. Use any type of paint suitable for normal plastic kits.


1


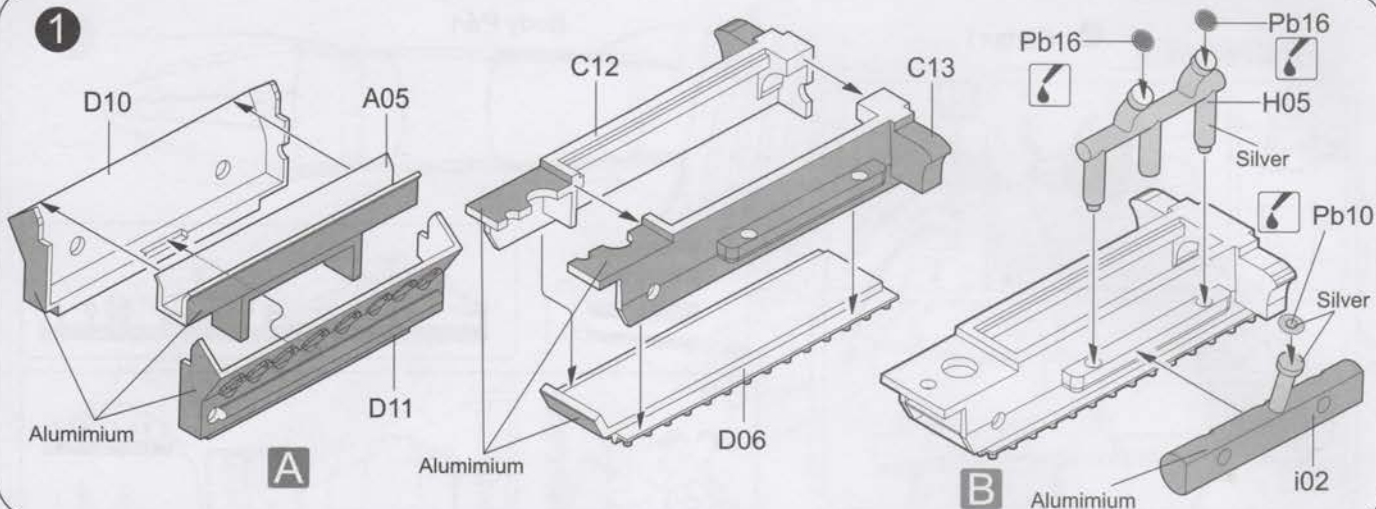



2



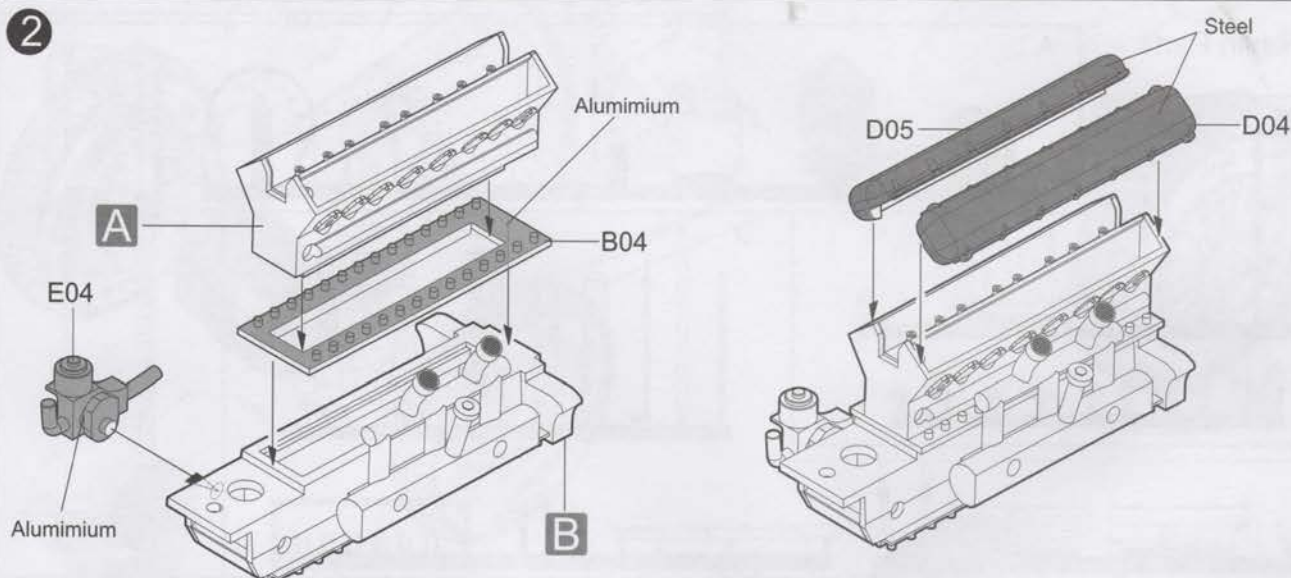


3

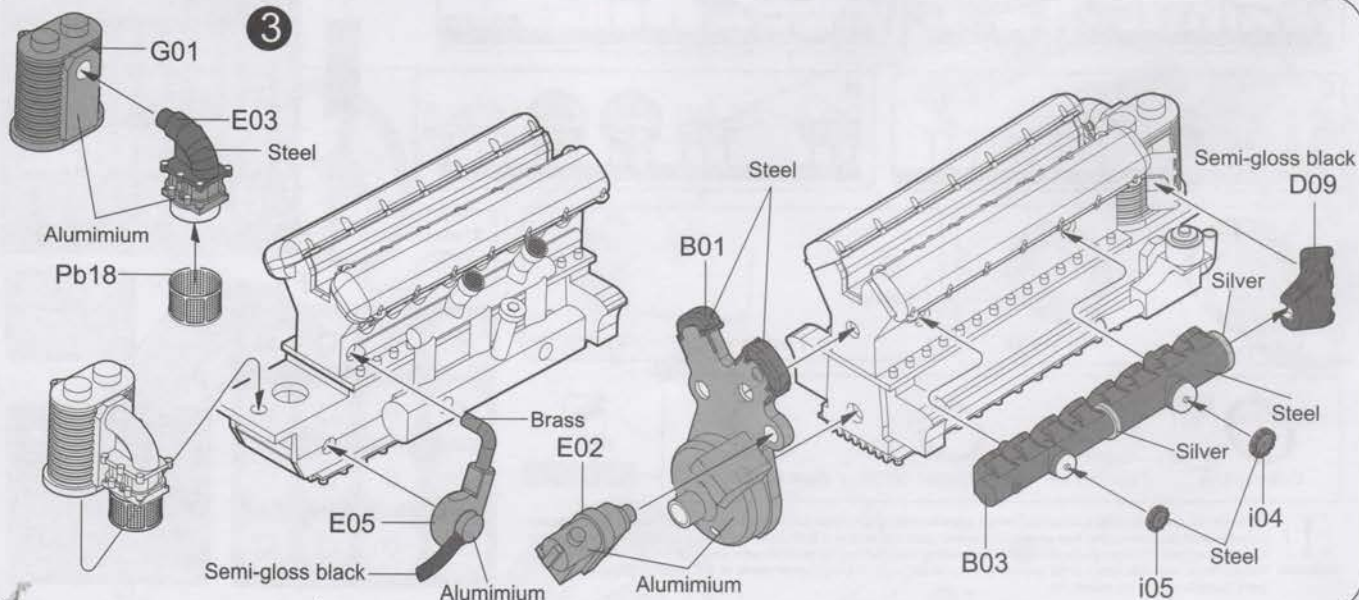

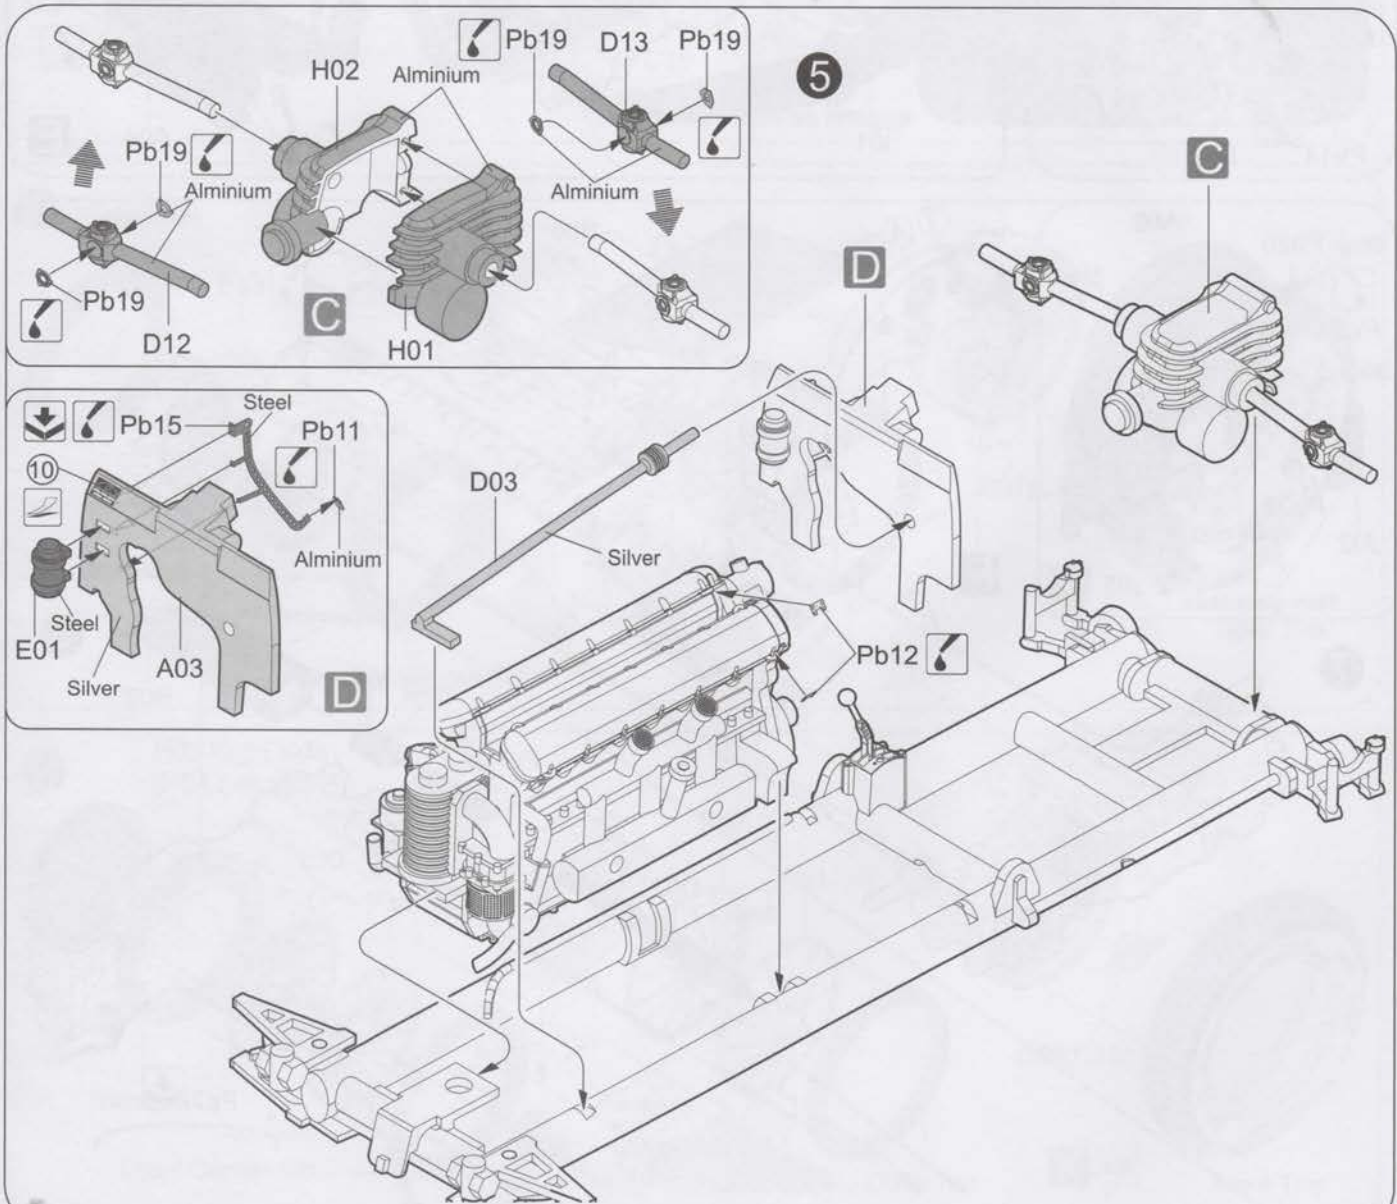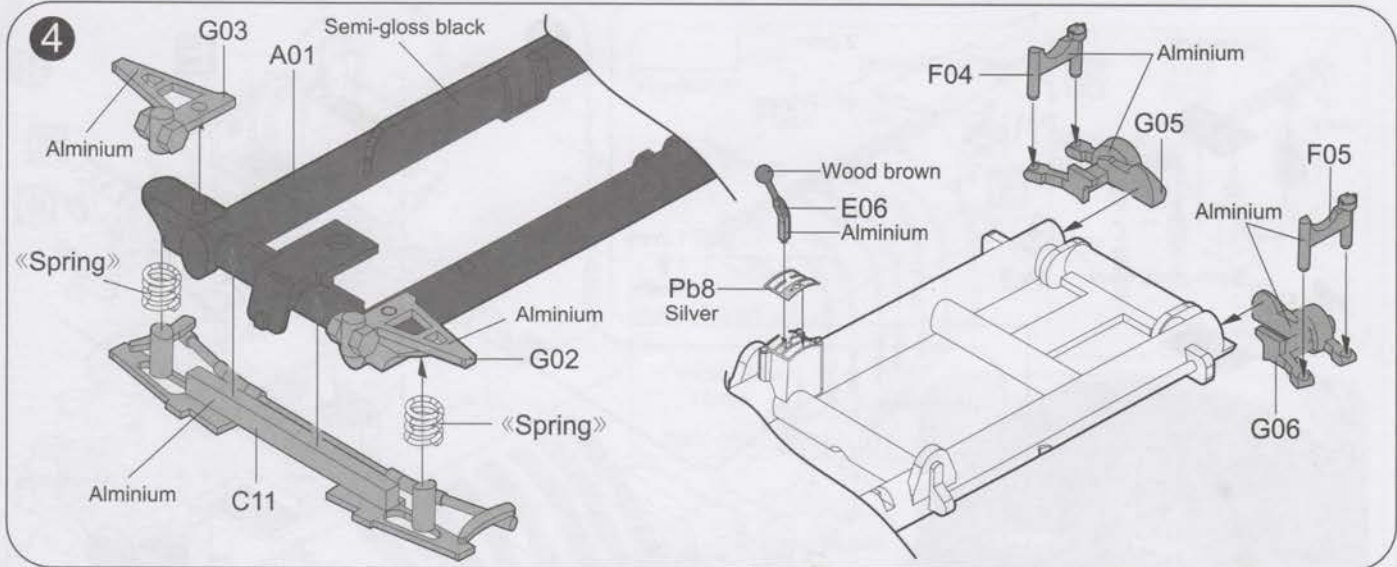

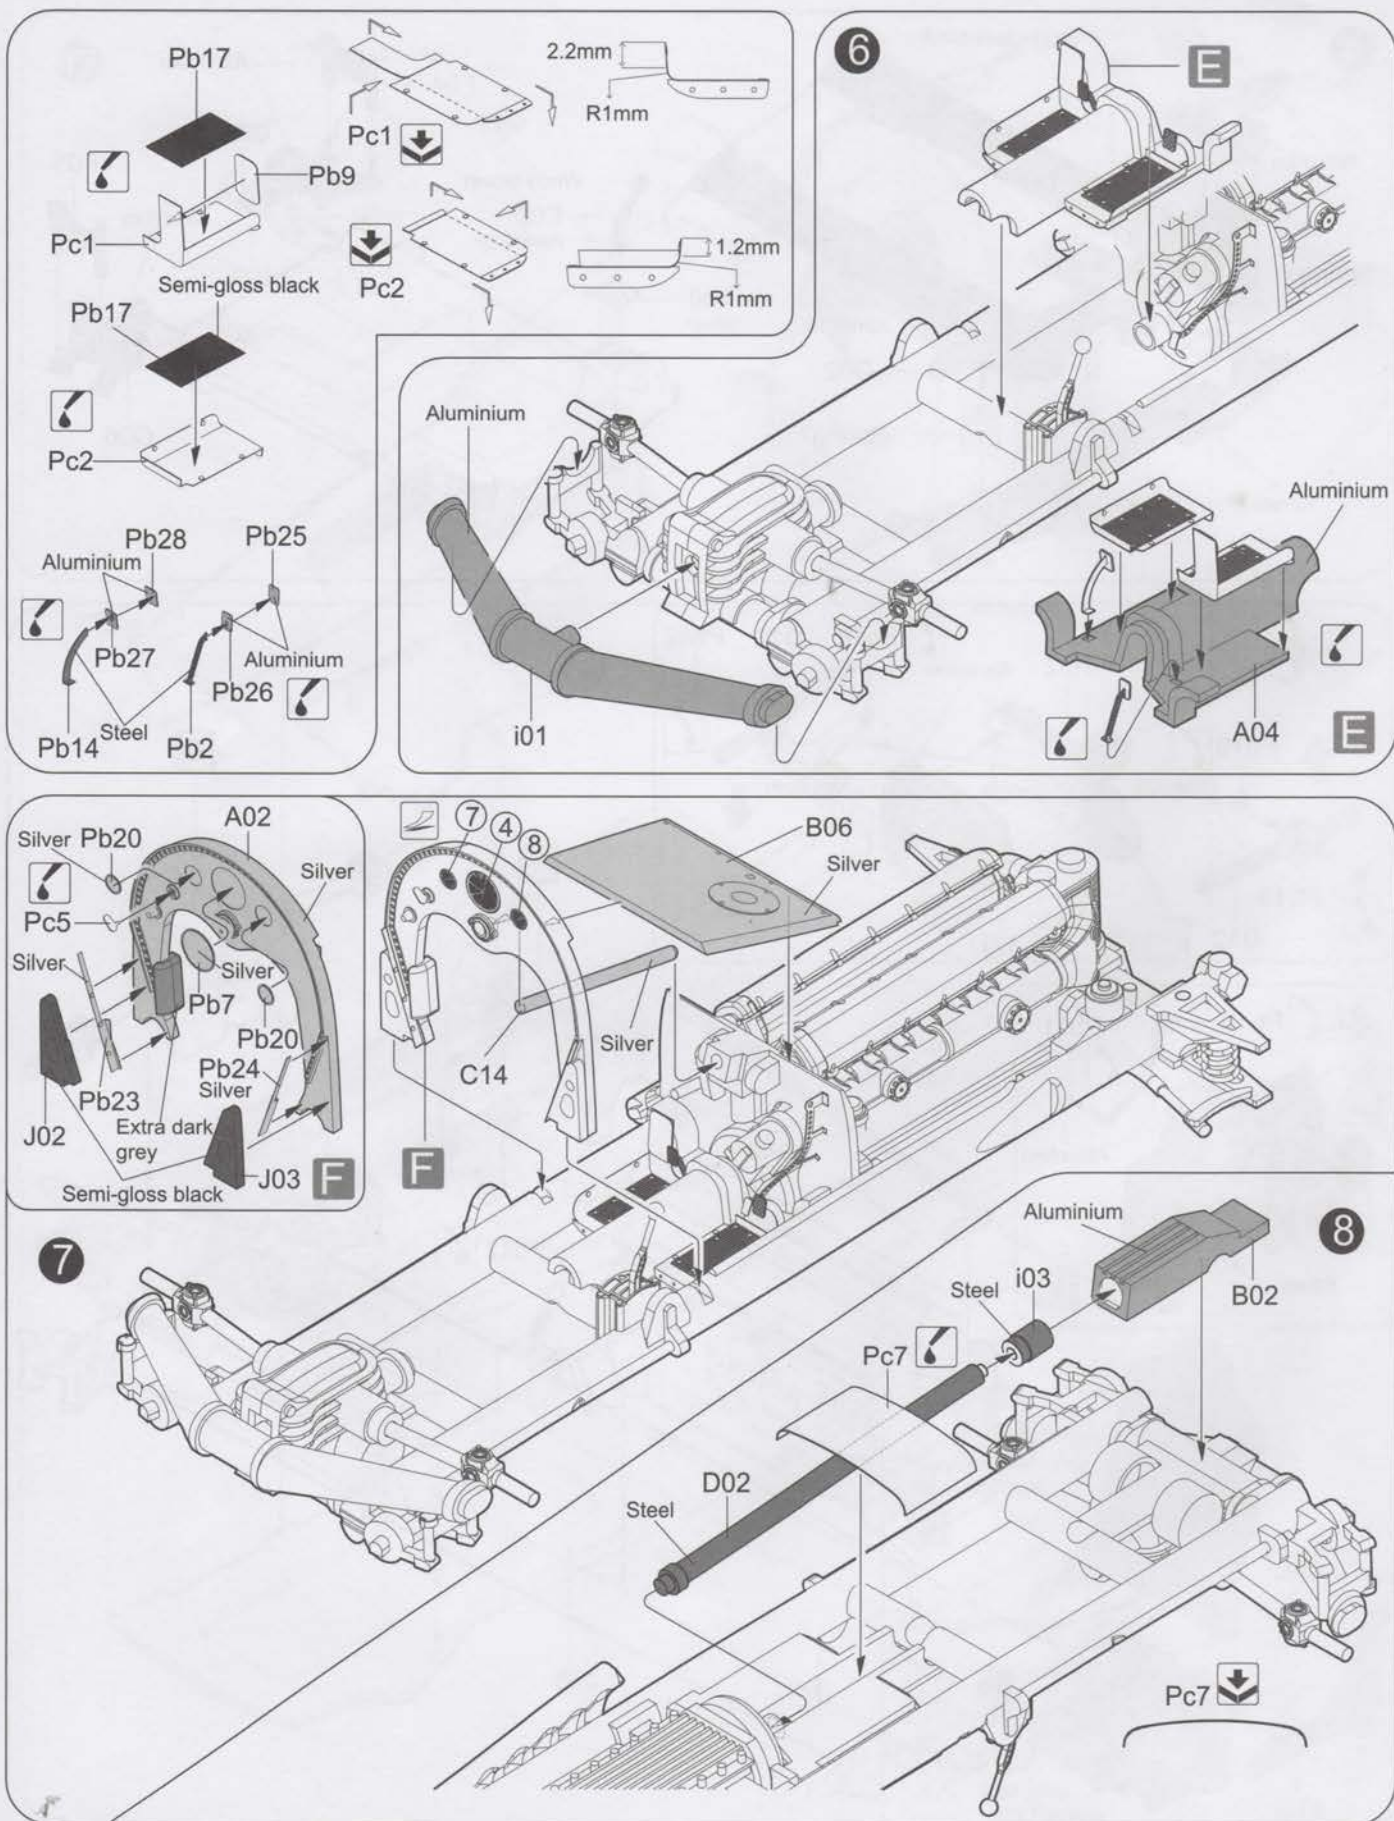

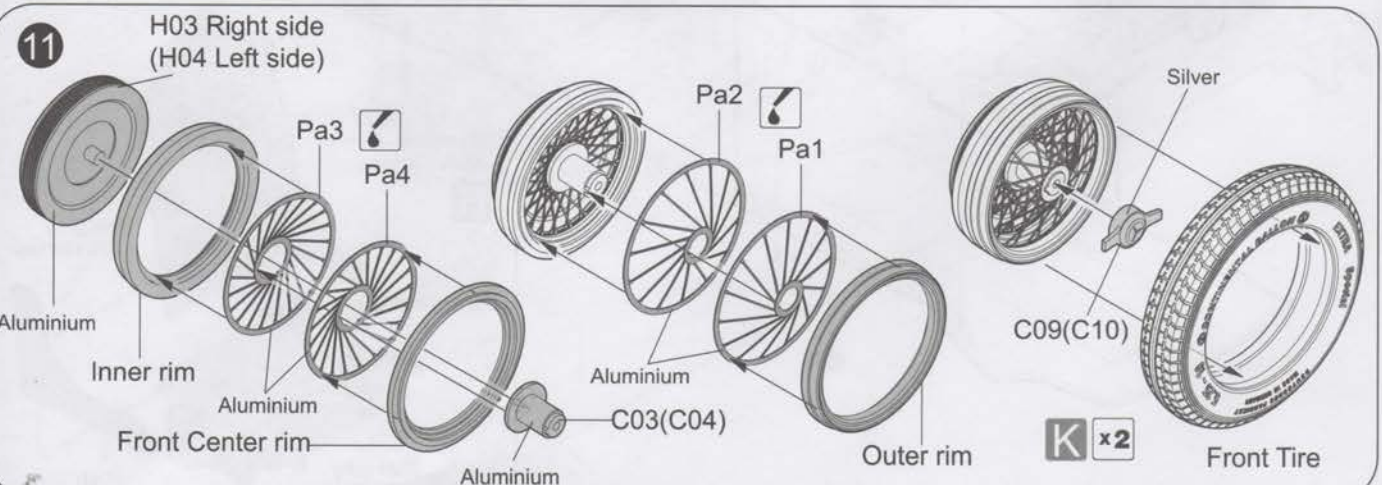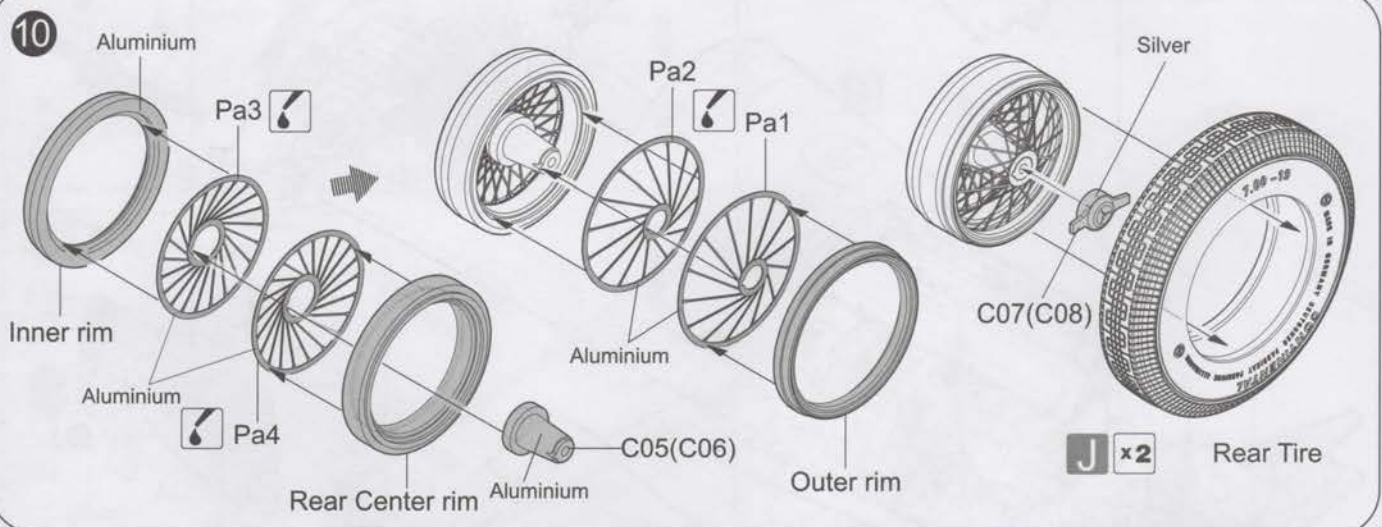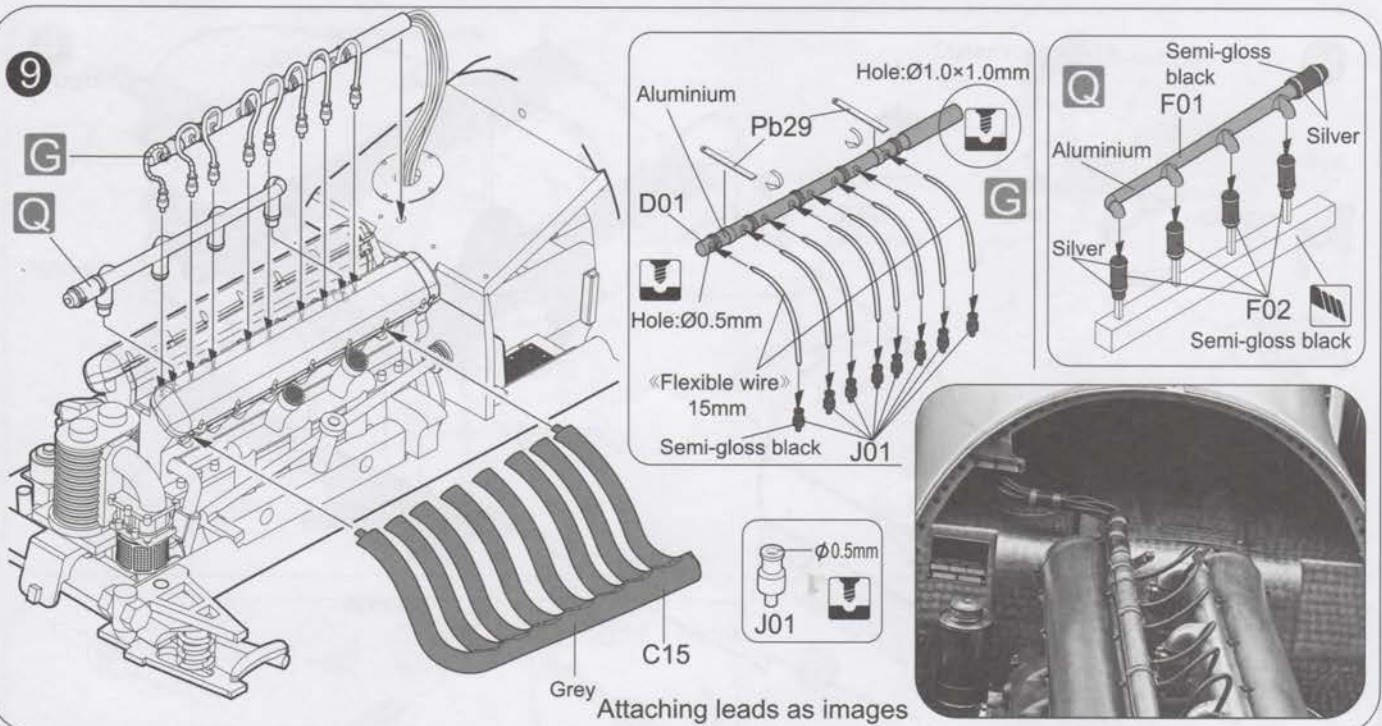

12

<<Windscreen>>

<<Body>>

Silver

F03

B05

Aluminium

A5

A6

A07

Blue grey
+20% Flat base

H

Blue grey
+20% Flat base

Semi-gloss black


A06

Blue grey
+20% Flat base


C16



15

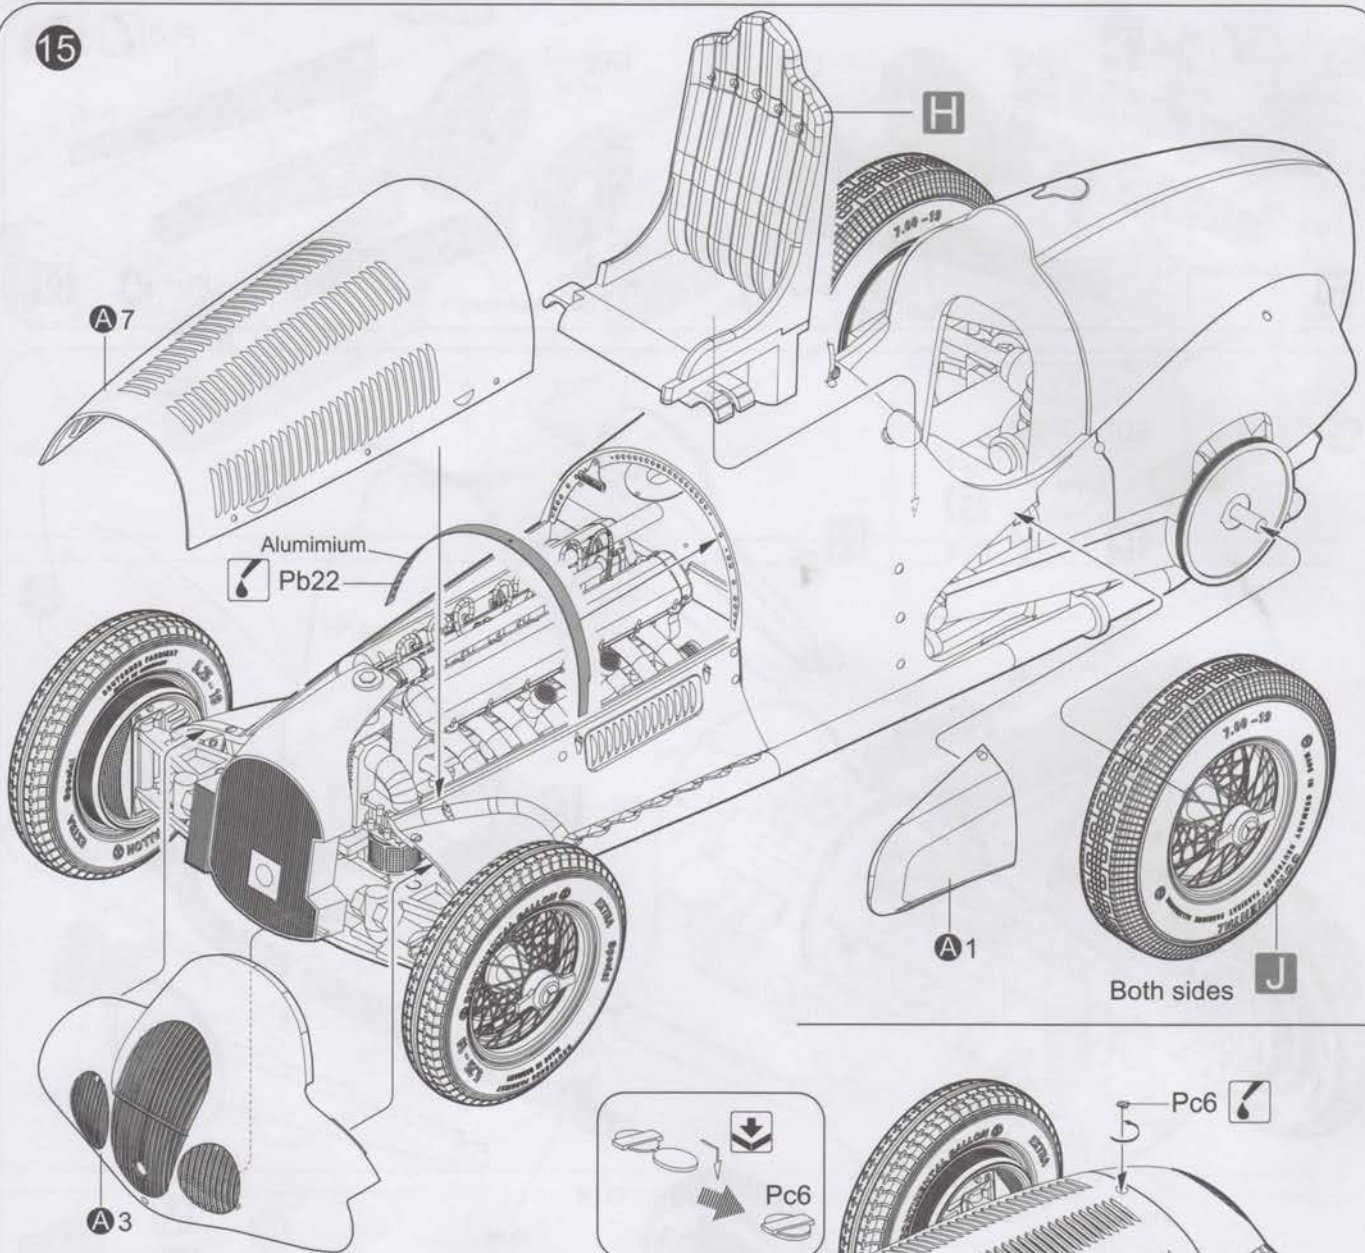


16

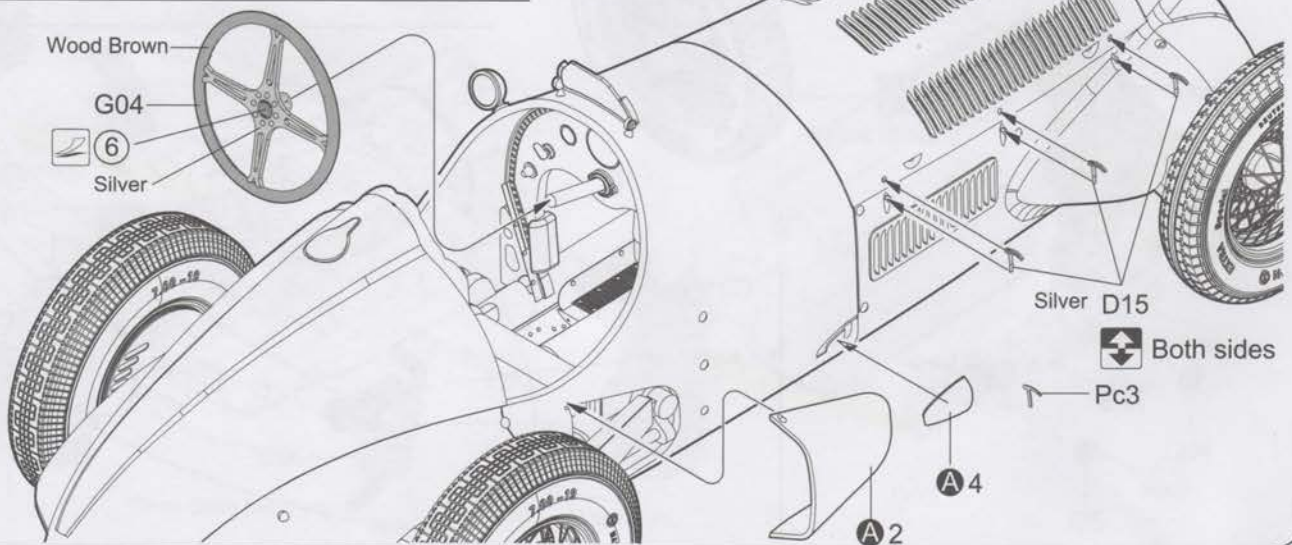

Body Color: Aluminium

Hermann Lang # 16 - 7th position

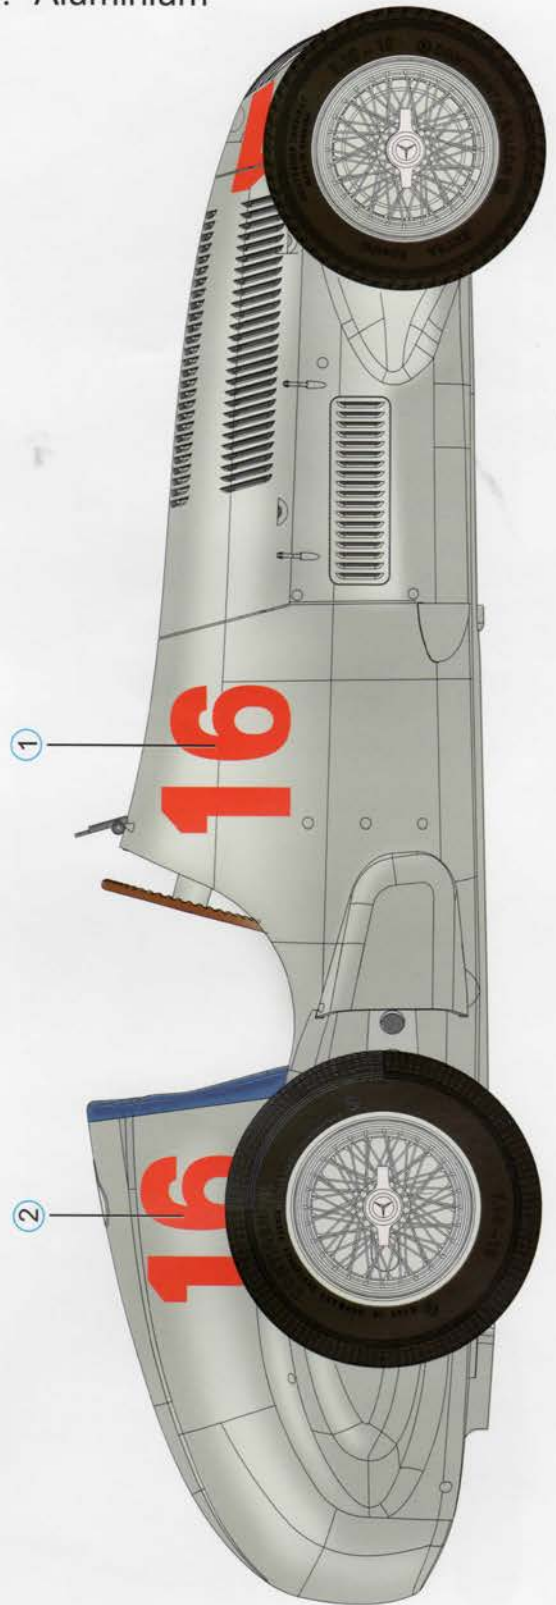

Body Color: Aluminium

