



Cut the suspension kit parts as shown to insert them into the jig.

Glue parts B3/B4 to the jig and add it to the body B25, fill and sand before assembly.

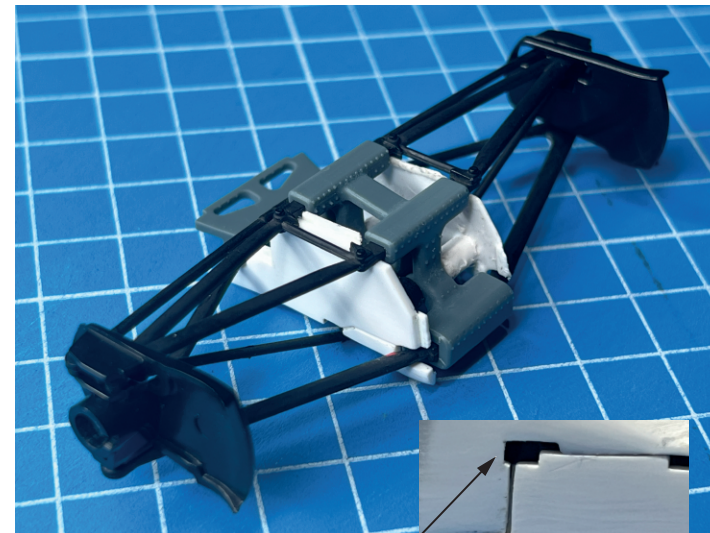

Widen the opening for easier install of C14.

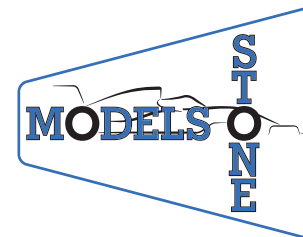

COPYRIGHT © 2024  
by STONE Models

**A077/2024**