


INSTRUCTION




A017/2022

Part list



Part preparation

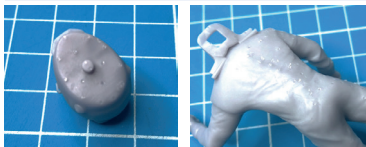

Remove all 3D printing support marks by sanding (maybe some putty is necessary) and wash the parts before painting.

Use cyanoacrylate glue to put the parts together.

HANS system



Paint the buckles and the rivets. Glue the rivets in the buckles and install the belt between the buckles with a distance of about 18mm. For installation drill 2 holes in the middle of the attachment points on the helmet.

Additional details

In order to achieve further detailing, it is possible to attach additional accessories. It is recommended to use 0.6mm clear tubing for the drinking tube. To attach it, drill an additional hole in the front bottom area of the helmet and glue in the tube. For further connection cables with plugs (e.g. radio) it is best to use 0.4mm wire and slightly larger aluminum tubes or styrene rods. After making it, attach it so that the ends come out of the neck area on the overall. The image can be used as a template.

